


2. Tape the double-sided tape to the top of the headrail.

Tape & Peel




2. Tape the double-sided tape to the backside of the headrail.

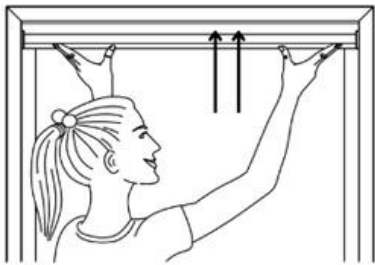

3. Attach the shade to the top of the window frame.

Inside Mount

Attach

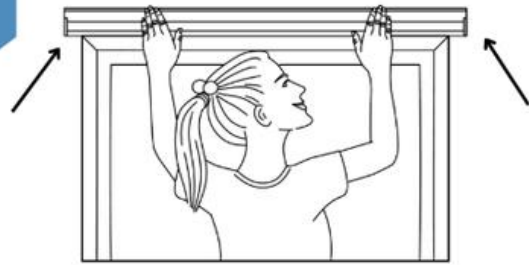

3. Attach the shade to the wall above the window frame.

Outside Mount